







Mounting instructions for universal 1metre TV ceiling mount.  
Fits to flat ceiling, cable management through mounting pole.  
Maximum TV fixing points up to 400mm x 300mm - Up to 35Kgs







Model No. **PMVCEILINGSMALL** Factory No. **Z3255CMVESA**

Read these instructions carefully before installing your equipment.  
Install the mount in a suitable location using fixings which are appropriate for the ceiling material and structure. Consult a qualified builder if you're in any doubt as to the structural integrity of the ceiling.  
Do not attempt to alter or modify any part of the ceiling mount or its attachments.  
Do not use if any parts are broken or appear to be damaged.  
Tighten all bolts and fixings securely. Only use fixings provided with this bracket.  
Do not mount your TV close to sources of heat or moisture.  
Always have a minimum of two persons to install the TV on to the mount.


## Mount Assembly Kit

	A - M8 x 75mm Bolt	x2
	B - M8 Nut	x2
	C - M8 washer	x2
	D - M6 x 12mm Bolt	x4
	E - M6 washer	x2
	F - M6 Grub Screw	x8


## TV Fixing Kit

	G - M4 x 16mm	x4
	H - M5 x 16mm	
	I - M6 x 16mm	
	J - M5 Washer	x4
	K - M5 x 10mm	x6
	L - M5 x 10mm	x6


Also Required

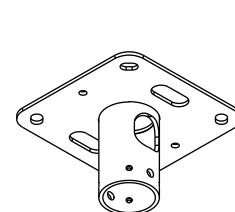


Ceiling plate assembly

 

1m Pole

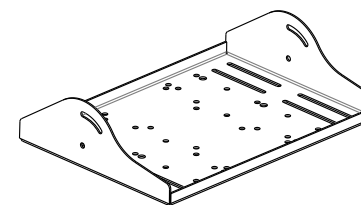


TV VESA mounting plate

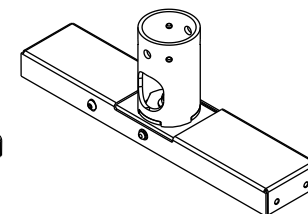




Tilt / Swivel Assembly

## 1 Attach mount to ceiling

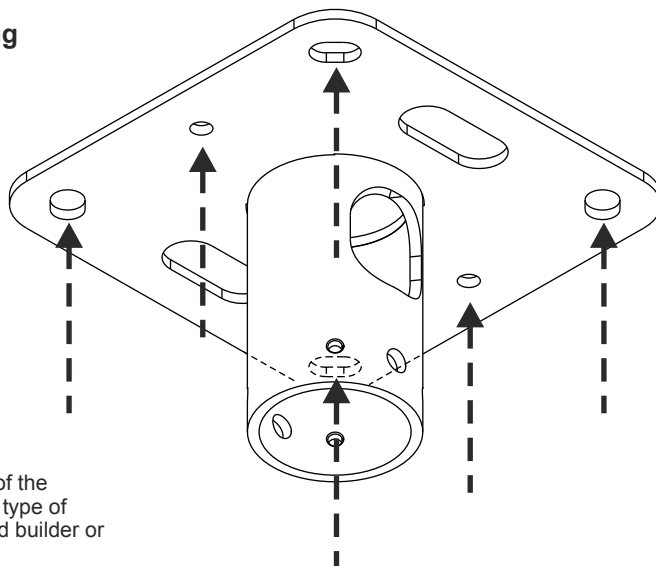


NOTE:  
If in any doubt of the suitability of the ceiling, its construction or what type of fixings to use, consult a qualified builder or installer.

## 2 Attach pole

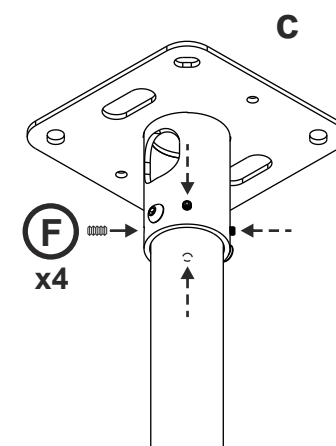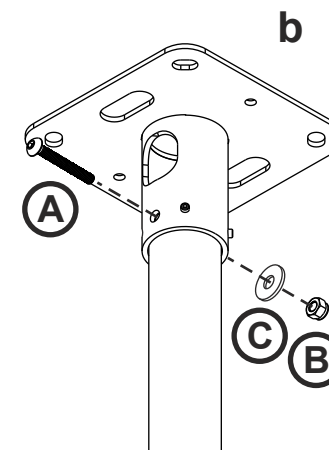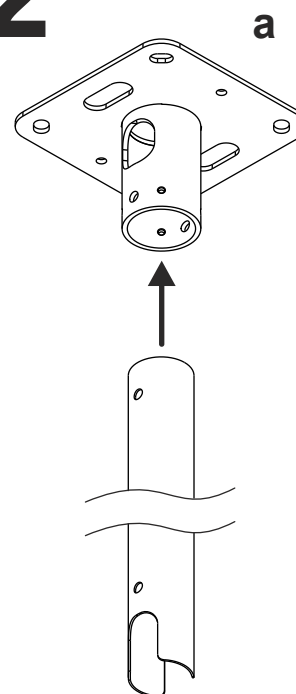


NOTE:  
Do not over-tighten bolt 'A' shown in Stage 2b above.  
When inserting Grub Screws 'F' as shown in Stage 2c above, insert finger-tight so all screws are at an equal depth against inner pole. Then tighten with allen key. Do not over-tighten these Grub Screws.


### 3 Attach TV to Mounting plate

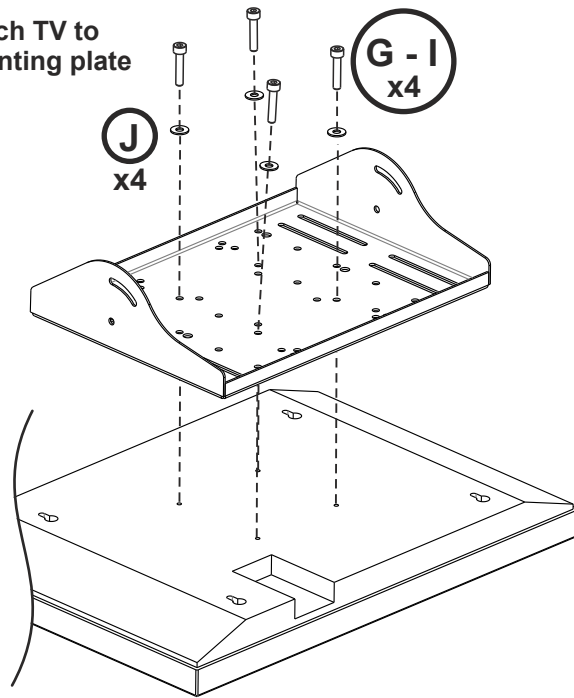


Note:  
For fixing points larger than 200mm x 200mm use the extension arms provided.  
Attach the extension arms to the TV plate as shown below.  
Fix the top extension arms to the top two TV fixing holes and move the bottom arms to line up with the bottom two TV fixing holes.

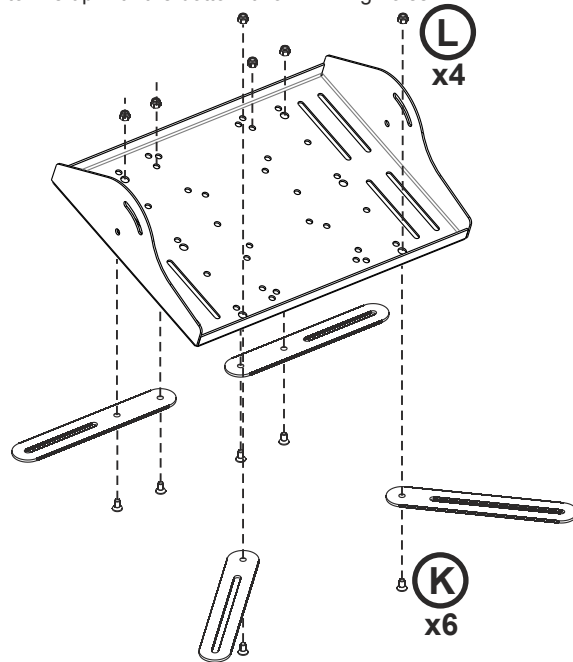


### 4 Attach TV Mount tilt assembly

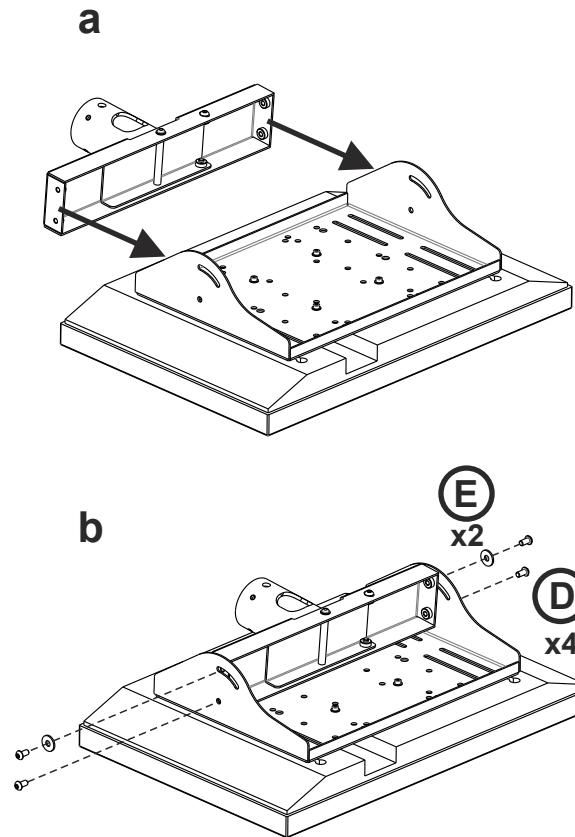

**C** Note:  
Adjust to full tilt to allow proper mount as per step 5

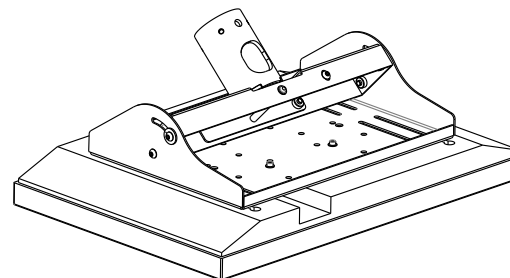

### 5 Attach TV Assembly to pole

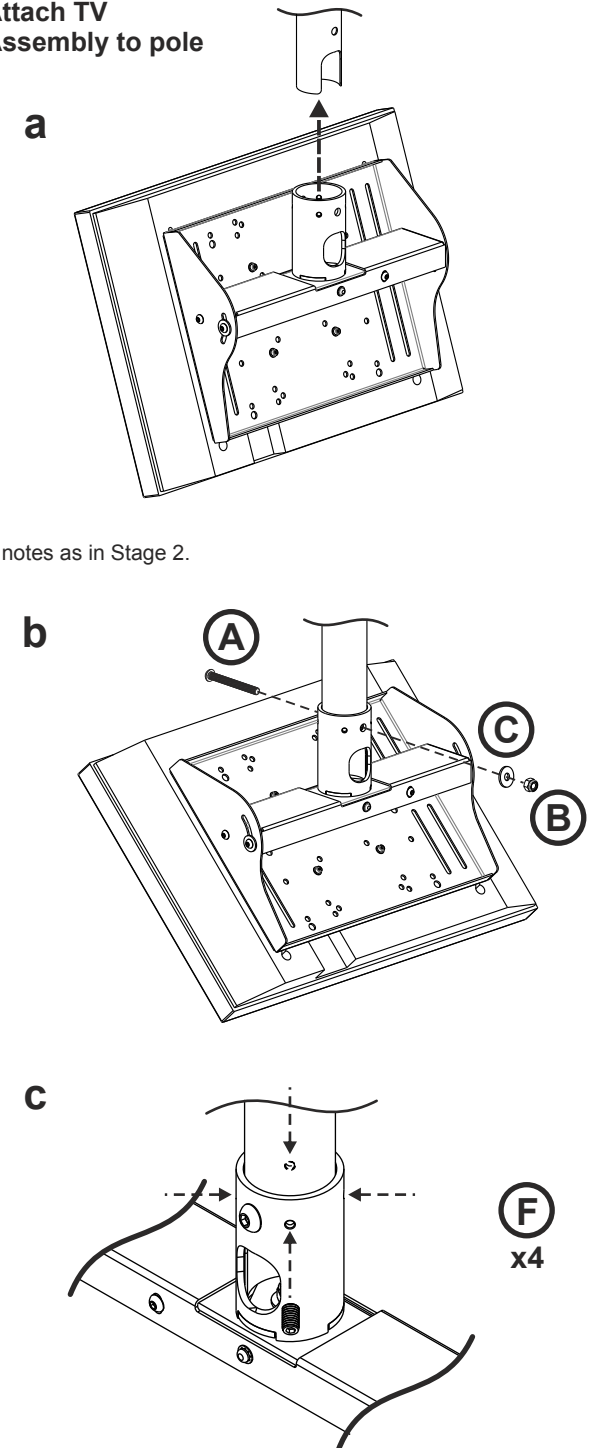


Note:  
Follow notes as in Stage 2.

## 6 Fine adjustment of level and position

To adjust the forwards/backwards tilt of the TV loosen bolts 'a' and 'b' on both sides of mount. Re-position TV to desired position and then re-tighten bolts 'a' and 'b' on both sides of mount'.

To adjust sideways tilt loosen bolts 'c' on both sides of tilt plate, re-position TV to desired position and then re-tighten bolts 'c' on both sides of tilt plate.


To adjust lateral direction rotate the tilt plate assembly as required.

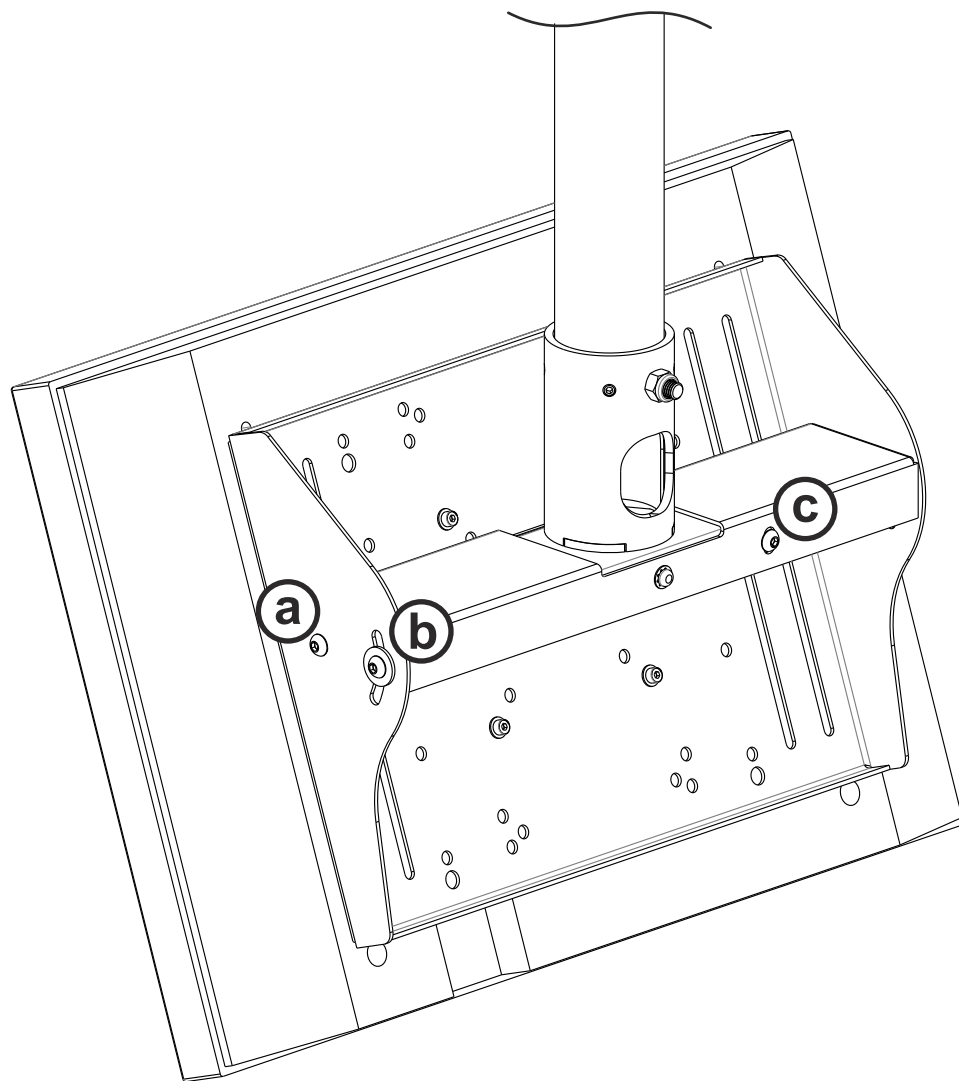

## 7 Shortening main pole


**a**

Cut pole from top

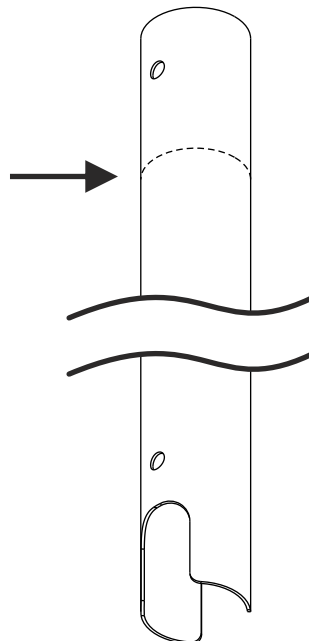

**b**

Re-drill 9mm hole through approx 30mm from pole top

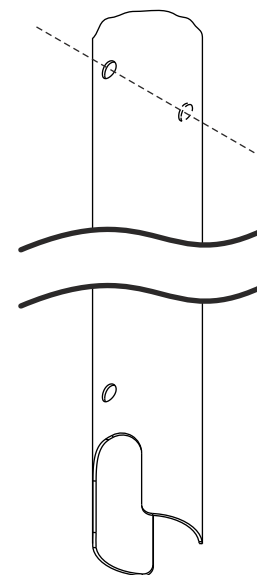

**c**

Assemble pole as described in Stage 2.

