Stand Assembly Kit

	A - Metal Pivot Bridge	x1
	B - Metal Pivot Bush	x2
	C - Metal Pivot Washer	x2
	D - Nylon Pivot Spacer	x2
	E - Metal Pivot Axel	x1
	F - Nylon Pivot Pad	x1
(8)	G - M8 x 35mm Bolt	x2
	H - M8 x 20mm Bolt	x4
TV Fixing Kit		
	I - M6 x 25mm	x4
	J - M8 x 16mm K - M8 x 25mm	x4
(O)	L - M6 washer M - M8 washer	x4

N - M8 x 6mm O - M8 x 12.5mm

P - M6 x 20mm

x4

x2

Mounting instructions for Universal TV desk/table top stand. VESA 200/300/400/600 x 400 - Universal up to 660mm X 400mm 32" to 52" (81cm to 132cm) - Up to 75Kgs

> Model No. PMVMOUNTMTD1

Factory No. ZMTD1

- Read these instructions carefully before installing your equipment.
- Install the stand in a suitable location and only on a horizontal flat surface.
- Do not attempt to alter or modify any part of the desk mount or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Tighten all bolts and fixings securely. Only use fixings provided with this
- Do not mount your TV close to sources or heat or moisture.
- Always have a minimum of two persons to install the TV.



