 


Mounting instructions for Extra Large Universal Tilting Wall TV Bracket.
 VESA 200/300/400/600/600x400/800x400/800x600 - Universal up to 1200mm X 600mm
 65" to 100" - Up to 135Kgs

Model No. **PMVMOUNTXFBT** Factory No. **FAB0840XWT-2018**

- Read these instructions carefully before installing your equipment.
- Install the wall bracket in a suitable location using fixings which are appropriate for the wall material and structure. Consult a qualified builder if you're in any doubt as to the structural integrity of the wall.
- Do not attempt to alter or modify any part of the wall mount or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Tighten all bolts and fixings securely. Only use fixings provided with this bracket.
- Do not mount your TV close to sources of heat or moisture.
- Always have a minimum of two persons to install the wall bracket and TV.

TV Fixing Kit



A - M6 x 30mm
B - M6 x 50mm
C - M8 x 30mm
D - M8 x 50mm

X4



E - M8

X4



 
F - M8 x 6.5mm
G - M6 x 6.5mm

X4



H - M8 x 6mm
I - M8 x 12.5mm

X4



J - M6 x 20mm

X2

1 Mount Bracket To Wall

 
NOTE:

For ease of installation mount bracket on wall using position 1 and mark other positions using a spirit level. Then remove fixing from position 1, remove bracket and drill other positions.

Use Fixings suitable for your type of wall construction. (Not included).

Use All available fixing points.


If in any doubt of the suitability of the wall, it's construction or what type of fixings to use, consult a qualified builder or installer.

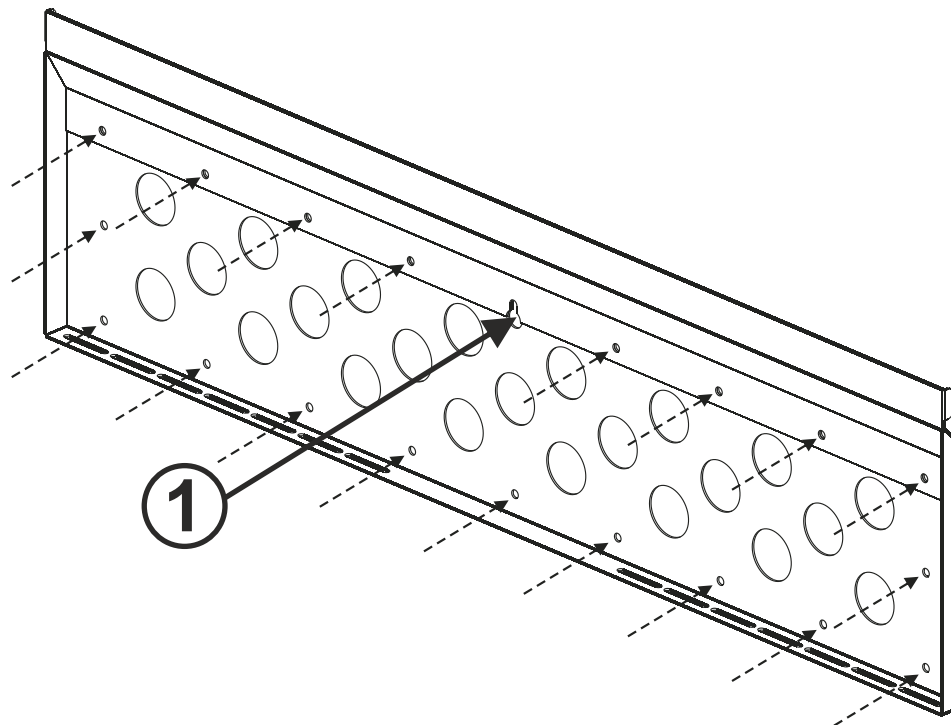

2 Secure tilting arms

Although the tilting arms are assembled with the retaining bolt in place, ensure it is in position and adequately tight before further bracket assembly.

 
One bolt per arm on outer side.

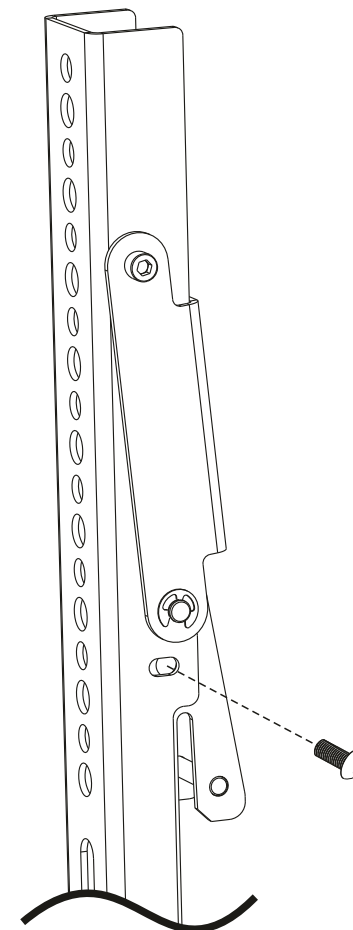

3

Attach tilting arms to screen.

 Spacers 'G' to 'J' can be used between the TV and bracket where the TV rear panel is not flat or where extra depth is required for cable access. They can also be used on the screw head side to adapt screws to shorter lengths.

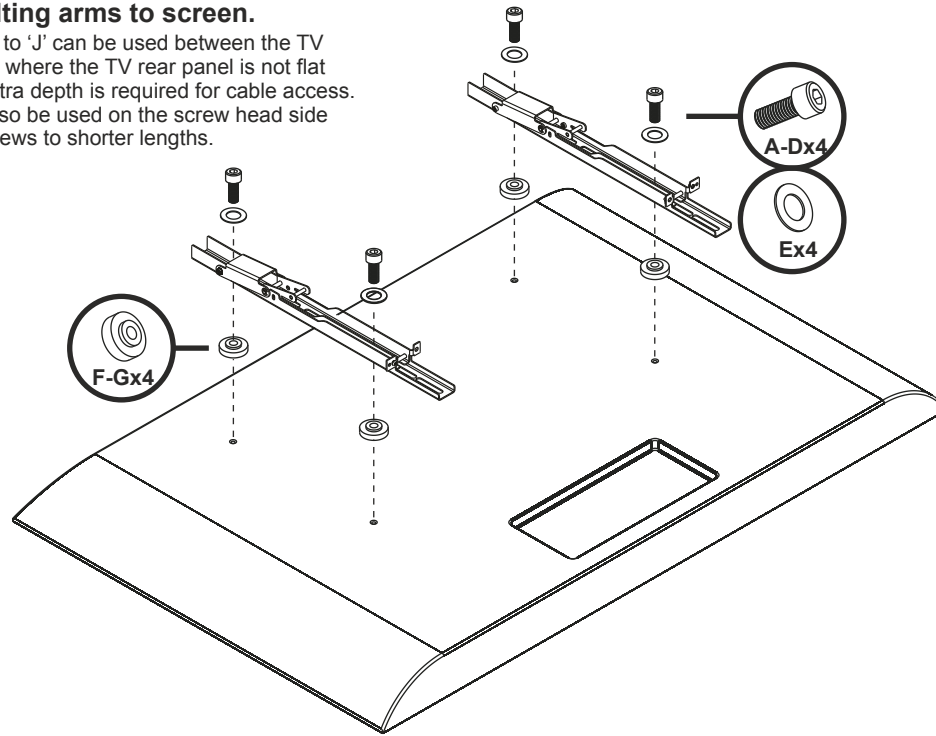


4

Hang TV on bracket wall plate

Lift TV in to position, bring the bottom of the TV away from the wall and tilt the top edge in to allow the arms to hook over the wall plate.

 Note: Two persons should lift the TV to prevent injury or damage to the TV or bracket.

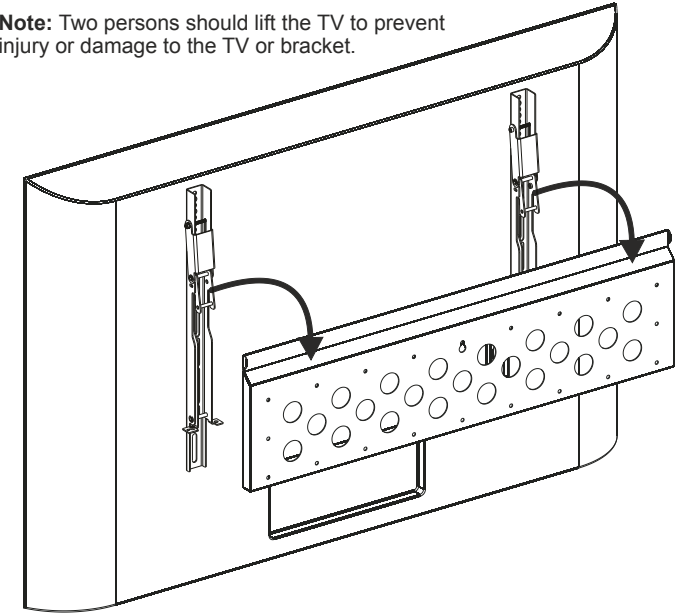


5

Secure screen on TV mounting plate

Secure screen on TV mounting plate prior to any tilt adjustment.

 Note: You may require an extra long pozi drive screwdriver if the screen is particularly large.

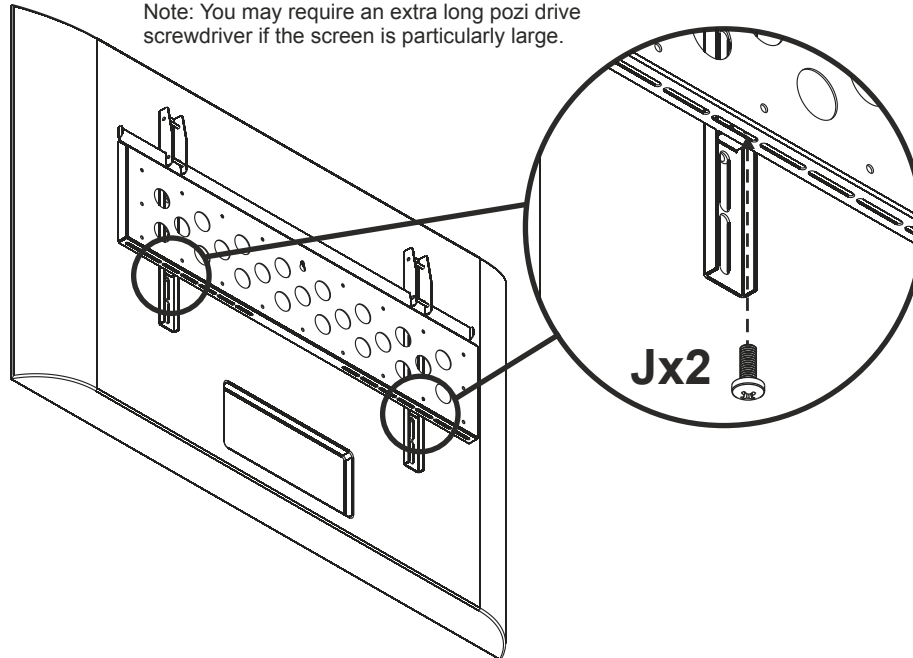

6

Tilt adjustment

Two persons should be present to adjust the tilt angle of the screen and bracket.

6A - The screen should be supported in its upright position by an additional person.

6B - Loosen the tilt adjustment allen bolts on both mounting arms.

6C - Remove retaining pozi drive screw from both mounting arms.

6D - Lower the tilt angle of the screen to desired level and tighten one adjustment allen bolt followed by the other making sure the angle of both mounting arms is the same.

Note: When screens are extra large or the VESA mounting pattern is small relative to the screen the use of extra long tools would aid installation.

