

 
 
 
 
Instructions for Small TV Trolley

Model No. **PMVTROLLEYXS**

Factory No. **PMVTROLLEYXS**



- Read these instructions carefully before assembling/installing your equipment.
- Do not attempt to alter or modify any part of this trolley or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Tighten all bolts and fixings securely. Only use fixings provided with this bracket.
- Install the equipment in a suitable location.
- Do not store or use your trolley close to sources of heat or moisture.

Assembly kit








Allen key included

Also required

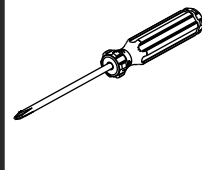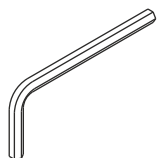


TV Fixing Kit

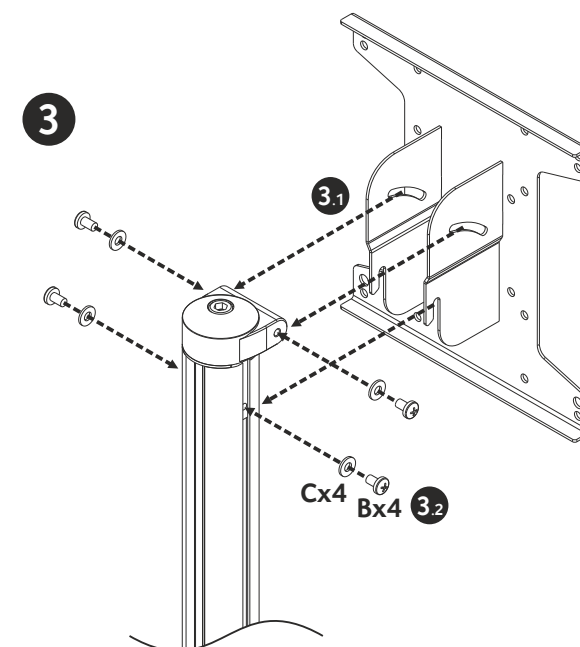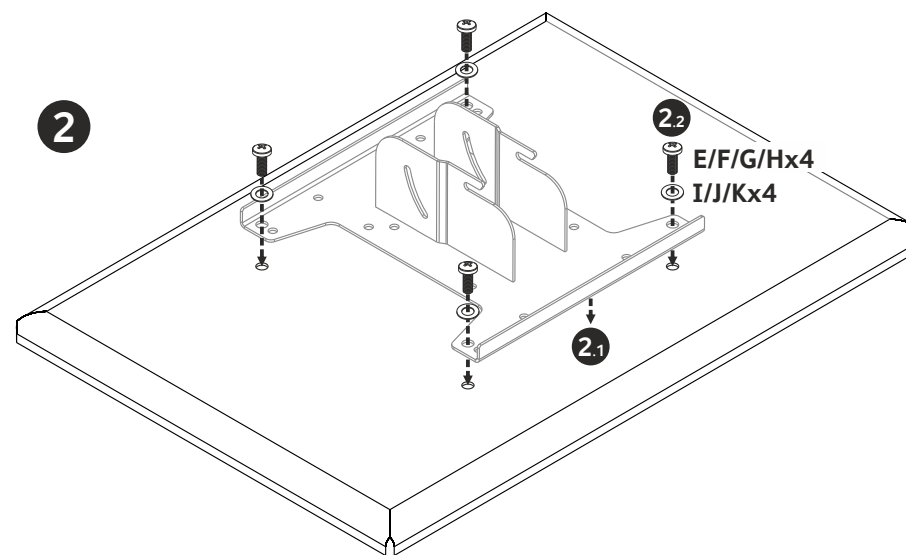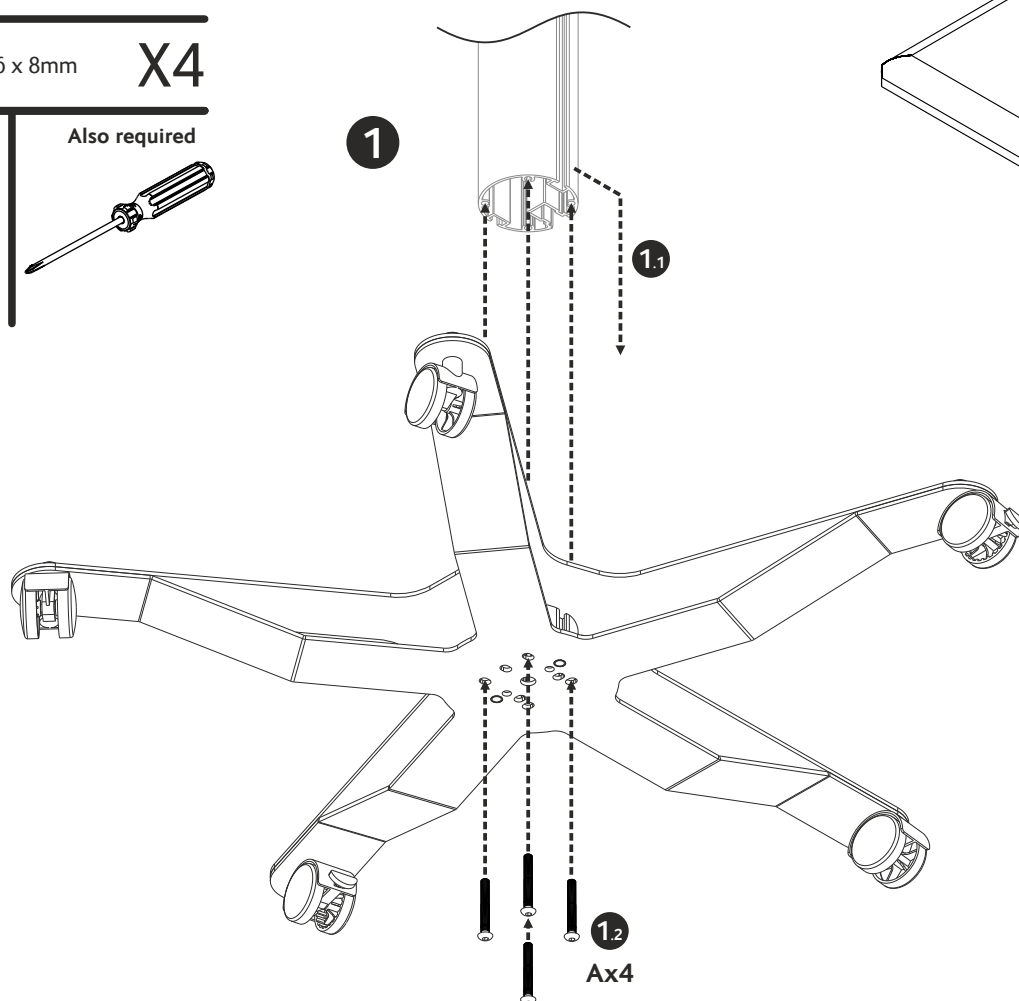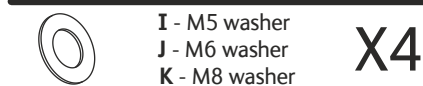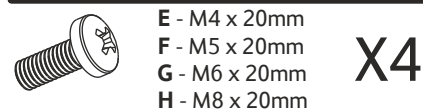


Secure TV mount at desired angle and secure by tightening all four fixings.


4

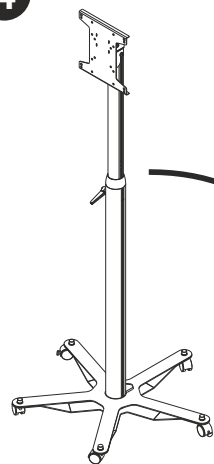

4.1 Gently lay on floor

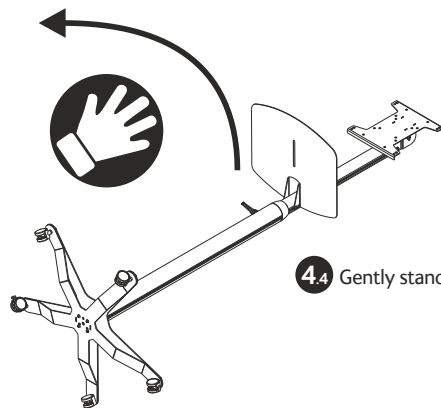

4.4 Gently stand upright

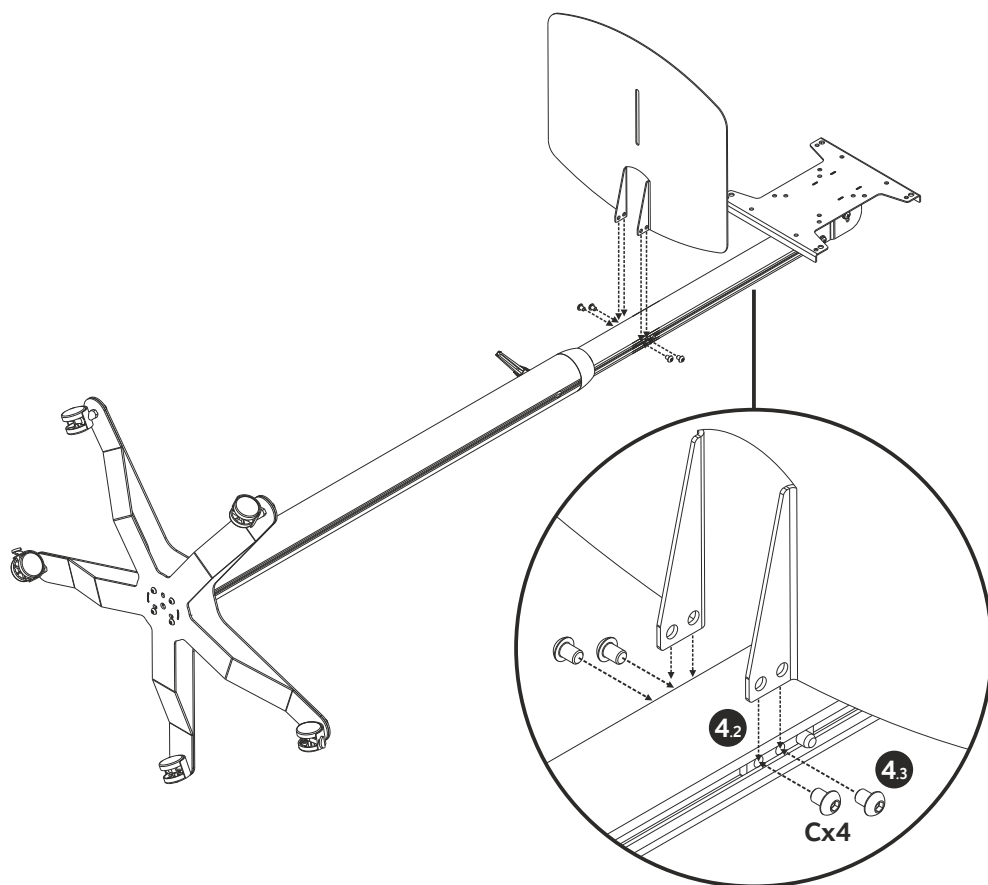

4.2


4.3

Cx4

5

Loosen handle to adjust height
Re-tighten once desired height is set


5.2

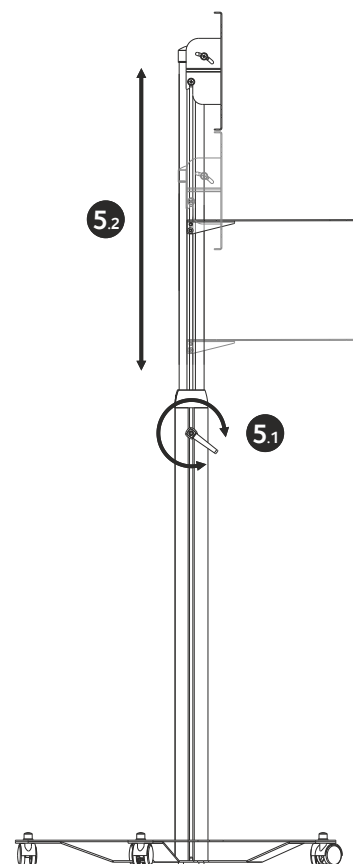

5.1

6

Cut cable management cover to desired length using a safety knife and insert in to rear of each upright.

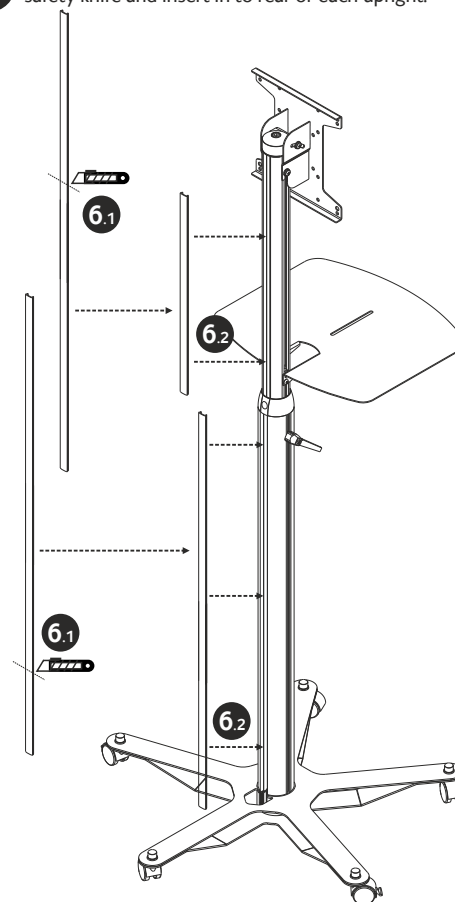

6.1

6.2

6.1

6.2