






- Read these instructions carefully before assembling/installing your equipment.
- Do not attempt to alter or modify any part of this trolley or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Tighten all bolts and fixings securely. Only use fixings provided with this bracket.
- Install the equipment in a suitable location.
- Do not store or use your trolley close to sources of heat or moisture.

Assembly kit checklist

 **A** - M6 x 70mm **X4**





 **B** - M6 x 10mm **X4**

 **C** - Nylon washer **X4**

 **D** - M6 x 8mm **X4**


Allen key included

Also required

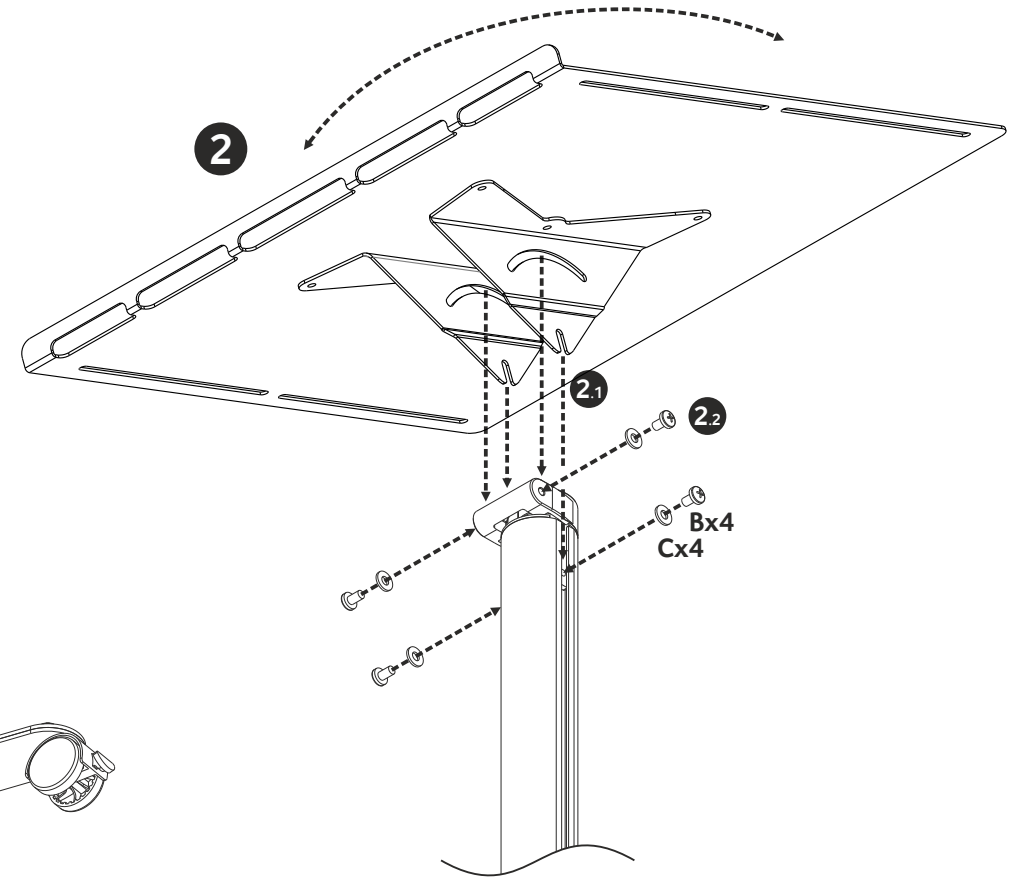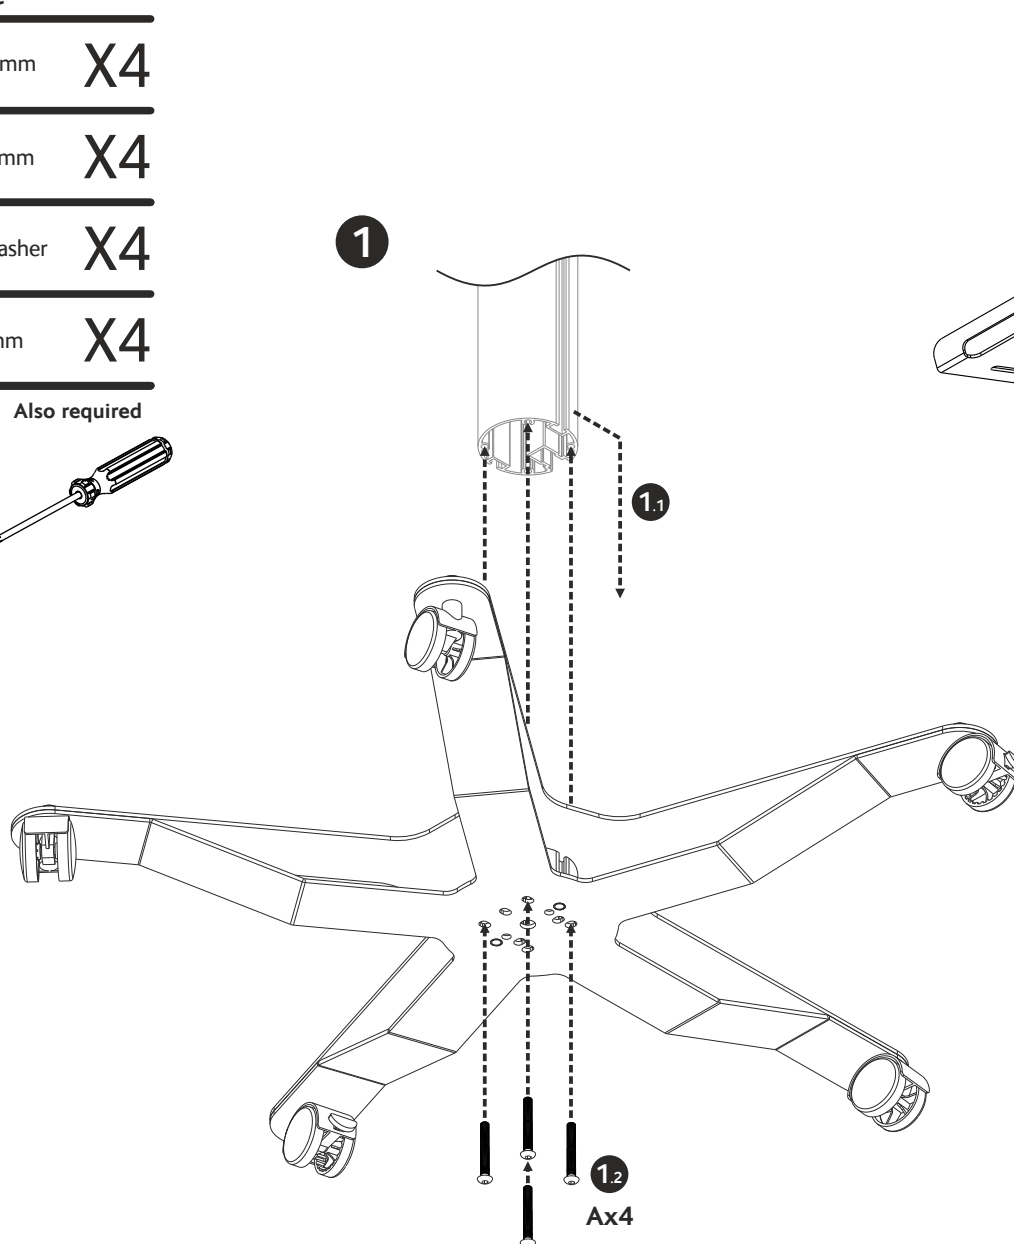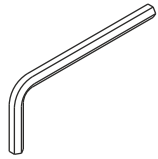


Secure projector tray at desired angle and secure by tightening all four fixings.


3

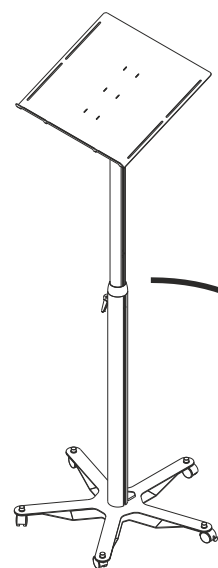


3.1 Gently lay on floor

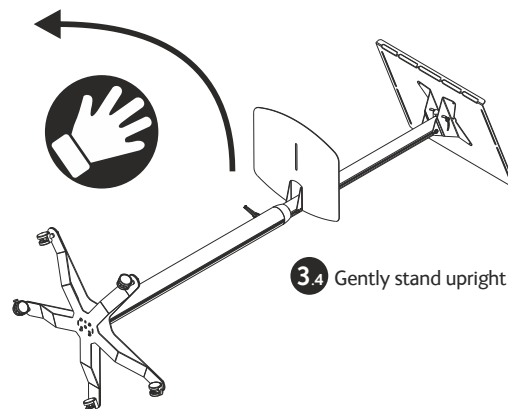

3.4 Gently stand upright

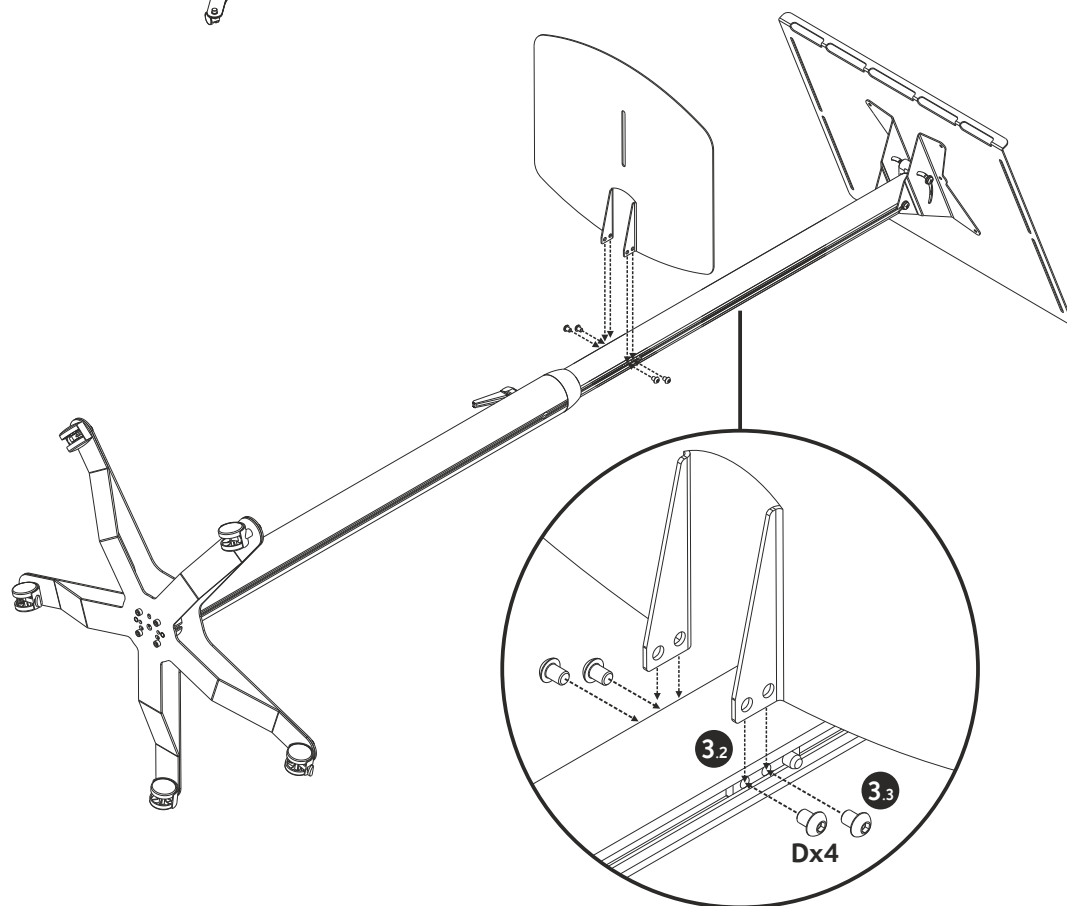

4 Loosen handle to adjust height
Re-tighten once desired height is set

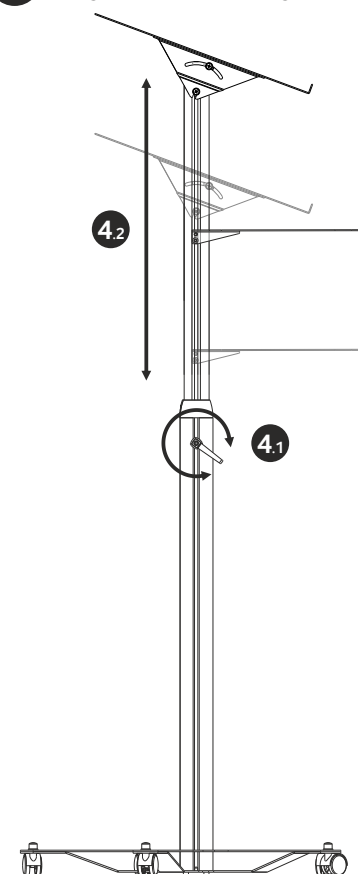

5 Cut cable management cover to desired length using a safety knife and insert in to rear of each upright.

