



- Read these instructions carefully before assembling this equipment.
- Assemble in a suitable location.
- Check the equipment has been supplied with all parts and fixtures prior to assembly.
- Do not attempt to alter or modify any part of the equipment or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Only use fixings provided with this product.
- Tighten all bolts and fixings securely with appropriately sized tools.
- Do not position the equipment close to sources of heat or moisture.

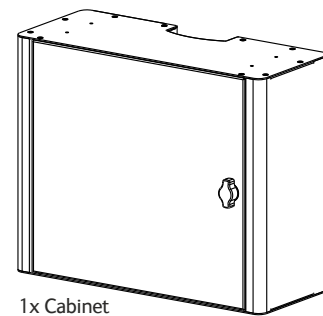

#### Checklist

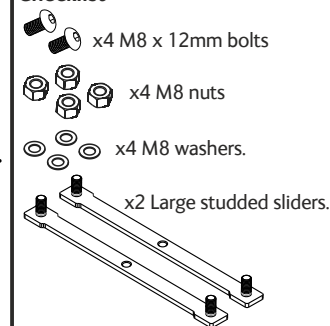

## 1 Assemble and insert sliders in to Trolley.

**1A** - Assemble x2 studded sliders to the inside of the centre brace, use x2 M8 x 12mm button head bolts, leave fixings loose. - **Fig 1A**


**1B** - Insert the sliders into the slider gullies on your PMVTROLLEY with the brace facing the front - **Fig 1B**

**1C** - Position the sliders where you would like the cabinet to be positioned and tighten the two bolts to secure them in place. - **Fig 1C**

**Note:** The cabinet can be mounted either way up so that the door can be open/closed to the preferred side.

**1D** - Position cabinet in front of the sliders - **Fig 1D**

**1E** - Lower cabinet on to the studs of the sliders - **Fig 1E**. Support the cabinet whilst you complete step 2A

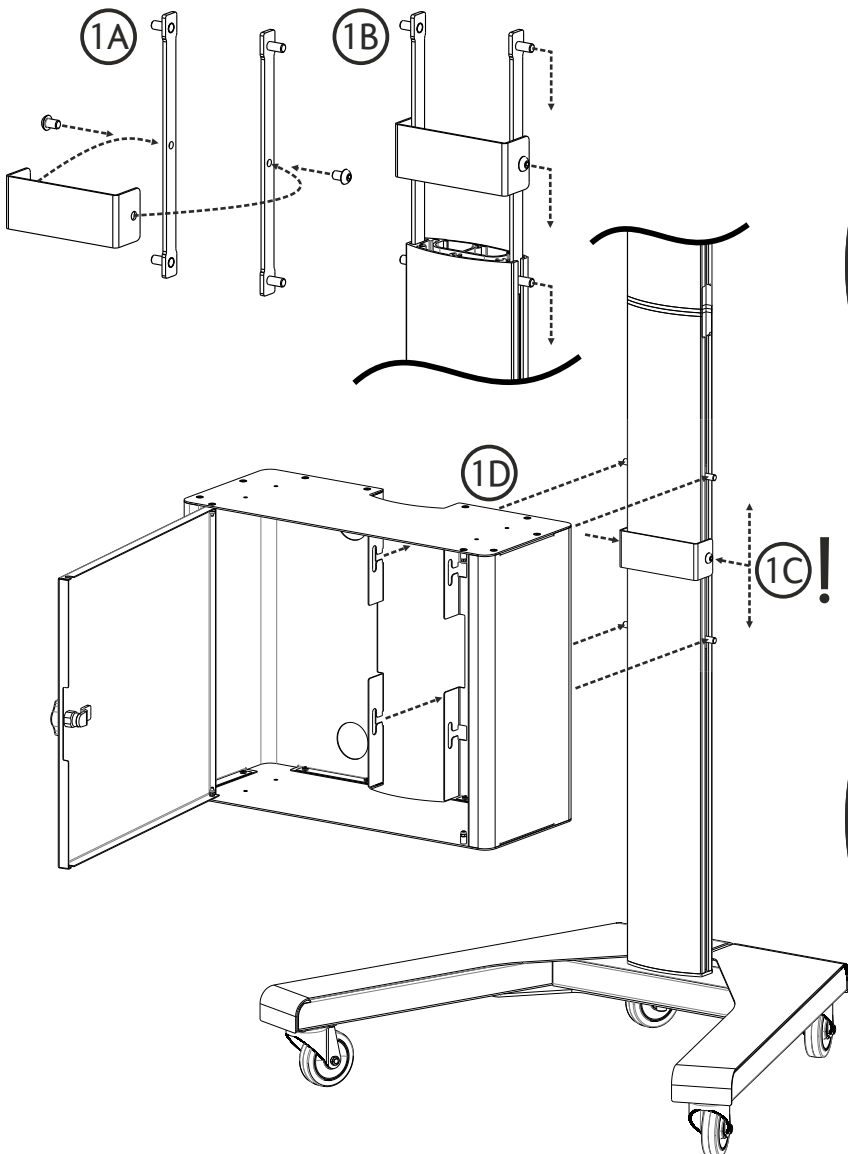

## 2 Assemble and insert sliders in to Trolley.

**2A** - Secure cabinet to sliders using x4 M8 washers & x4 M8 nuts. - **Fig 2A**

**Note:** To adjust the height position of the cabinet loosen all fixings and re-tighten when the cabinet is at the desired height.

